

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

1937 -1940 Ford Coupe, Convertible & Convertible Sedan Fabric Sample Card

Ordering Guidelines

Thank you for inquiring about **CARTOUCHE™** brand premium products. In this sample card you will find all of our fabric options for 1937-1940 Ford Coupes and Convertibles. They are separated into eight groups:

- 1937-1940 Convertible and Convertible Sedan Top Roof & Top Boot Samples
- 1937-1940 Ford Coupe, Convertible and Convertible Sedan Carpet Samples
- 1937-1938 Coupe Authentic Upholstery Samples
- 1937-1940 Ford Coupe, Conv. & Conv. Sedan Authentic & Non-Authentic Upholstery Samples
- 1939 Coupe Authentic and Non-Authentic Upholstery Samples
- 1940 Coupe Authentic Upholstery Samples
- 1939 Convertible Rumble Panel and Upholstery Samples
- 1937-1940 Coupe Non-Authentic Upholstery Samples

When ordering a Coupe Upholstery Kit use the "Order Combination". When ordering a Top Roof Kit, Top Boot or Carpet use the "Order Code".



When ordering, please provide the following information:

1. Year and body style.
2. Type of product you want to order.
3. Sample descriptions and "order code" or "order combination" chosen from this card.
4. Shipping name and address.
5. Payment method.


Thank you from **CARTOUCHE™** and we look forward to meeting all of your V8 Ford upholstery product needs.



1937-1940 Convertible and Convertible Sedan Top Roof & Top Boot Samples

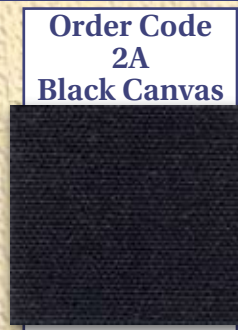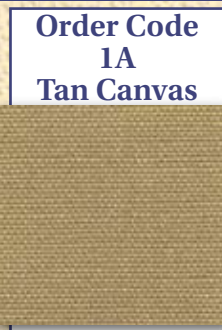

1937-1940 Ford Coupe, Convertible & Convertible Sedan Carpet Samples

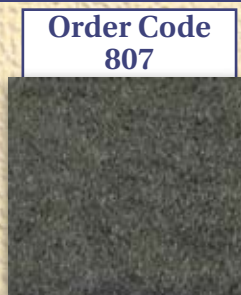


Dark Gray
Nylon



Brown
Nylon



Medium Gray
Nylon

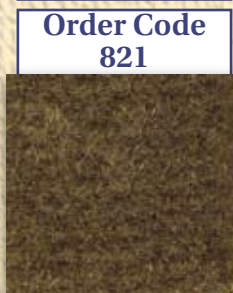

Taupe
Nylon



Charcoal
Nylon



Navy Blue
Nylon

1937-1938 Coupe Authentic Upholstery Samples

	Order Combination UV11X1	Order Combination UV11X2	Order Combination UV11X3	Order Combination UV11X4	Order Combination UV11X5
Seats					
	15X20	33X1S	15X37	30X3	15X38
Panels					
	2XLM	33X1S	15X37	30X3	15X38
Headliner					
	A810	A810	A810	A810	A810

1937-1940 Ford Convertible & Convertible Sedan Authentic & Non-Authentic Upholstery Samples

	Authentic	Non-Authentic		
	Order Combination UV32X1	Order Combination UV32N2	Order Combination UV32N3	Order Combination UV32N4
Seats				
	11XC	T14	T12	T22
Panels				
	T14	T14	T12	T22

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

1939 Coupe Authentic and Non-Authentic Upholstery Samples

Authentic	Order Combination UV12X1	Order Combination UV12X2	Order Combination UV12X3	Non-Authentic	Order Combination UV12N4
Seats				Seats	
	33X1S	15X37	15X36		T14
Panels				Panels	
	SX9	2XLM	2XLM		T14
Headliner				Headliner	
	A810	A810	A810		A810

1940 Coupe Authentic and Non-Authentic Upholstery Samples

Authentic	Order Combination UV13X1	Order Combination UV13X2	Order Combination UV13X3	Non-Authentic	Order Combination UV13N5
Seats				Seats	
	15X41	15X36	33X1S		T14
Panels				Panels	
	2XLM	2XLM	SX9		T14
Headliner				Headliner	
	A810	A810	A810		A810

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

1939 Convertible Rumble Panel and Upholstery Samples

Order Code T10 Black	Order Code T12 Dark Brown	Order Code T14 Saddle	Order Code T15 Sandlewood	Order Code T16 Walnut
				

1937-1940 Coupe Non-Authentic Upholstery Samples

	Order Combination UV31N1	Order Combination UA31N2	Order Combination UV31N3	Order Combination UV31N4	Order Combination UV31N5
Seats					
	5465	2522	4444	3412	8139
Panels & Headliner					
	11212	A811	A813	A815	A812
	Order Combination UV31N7	Order Combination UV31N8	Order Combination UV31N9	Order Combination UV31N10	
Seats					
	41734	41736	41924	9323	
Panels & Headliner					
	A811	A815	A815	5729	

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****