

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

1941 - 1948 Ford Coupe & Convertibles Fabric Sample Card

Ordering Guidelines

Thank you for inquiring about **CARTOUCHE™** brand premium products. In this sample card you will find all of our fabric options for 1941-1948 Ford Coupe and Convertibles. They are separated into six groups:

- 1941-1948 Convertible Only Top Roof & Top Boot Samples
- 1941-1948 Ford Coupe & Convertible Carpet Samples
- 1941-1948 Convertible Authentic & Non-Authentic Upholstery Samples
- 1941-1942 Coupe Authentic Upholstery Samples
- 1946-1948 Coupe Authentic Upholstery Samples
- 1941-1948 Coupe Non-Authentic Upholstery Samples

When ordering a Coupe or Convertible Upholstery Kit use the "Order Combination". When ordering a Top Roof Kit, Top Boot or Carpet use the "Order Code".

When ordering, please provide the following information:

1. Year and body style.
2. Type of product you want to order.
3. Sample descriptions and "order code" or "order combination" chosen from this card.
4. Shipping name and address.
5. Payment method.

Thank you from **CARTOUCHE™** and we look forward to meeting all of your V8 Ford upholstery product needs.



1941-1948 Convertible Only Top Roof & Top Boot Samples

Order Code
1A
Tan Canvas




Order Code
2A
Black Canvas




1941-1948 Ford Coupe & Convertible Carpet Samples

Order Code
807

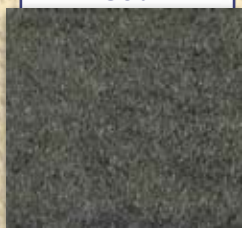


Dark Gray
Nylon

Order Code
868

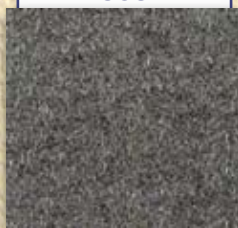

Medium Gray
Nylon

Order Code
897

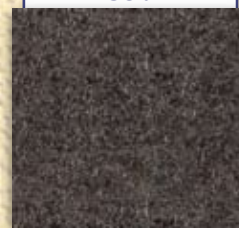

Charcoal
Nylon

Order Code
810



Brown
Nylon

Order Code
821



Taupe
Nylon

Order Code
840



Navy Blue
Nylon

1941-1948 Convertible Authentic & Non-Authentic Upholstery Samples

Authentic

Non-Authentic

	Order Combination UV32X1	Order Combination UV32N2	Order Combination UV32N3	Order Combination UV32N4
Seats				
	11XC	T14	T12	T22
Panels & Headliner				
	T14	T14	T12	T22












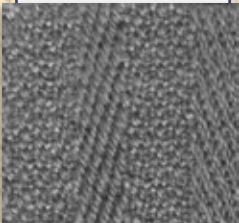



1941-1942 Coupe Authentic Upholstery Samples

Call for availability on this pattern.

	Order Combination UV14X2	Order Combination UV14X3
Seats		
	15X27	15X28
Panels		
	2XLM	SX2
Headliner		
	A812	A810

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

1946-1948 Coupe Authentic Upholstery Samples

	Order Combination UV15X1	Order Combination UV15X2	Order Combination UV15X3
Seat Faces	 15X24	 15X611	 33X1S
Partial Panels & Seat Backs	 SX3	 SX3	 SX9
Partial Panels & Seat Carriage	 T18	 T18	 T12
Seat Borders	 T13	 T13	 T12
Headliner	 A813	 A813	 A810

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****



Visit our website to order or find a dealer near you:
www.cartoucheupholstery.com

1941-1948 Coupe Non-Authentic Upholstery Samples

Seats



5465


2522

4444

3412

8139

Panels & Headliner

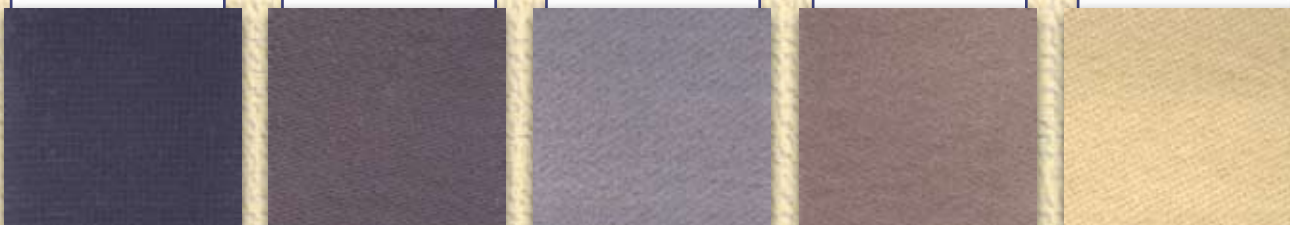

11212

A811

A813

A815

A812

Seats




41734

41736

41924

9323

Panels & Headliner

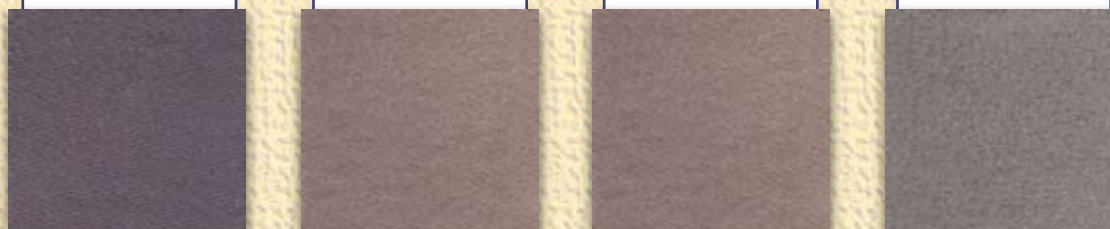

A811

A815

A815

5729

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****