

# 1932 -1936 Ford Tudor Fabric Sample Card

## Ordering Guidelines

Thank you for inquiring about **CARTOUCHE™** brand premium products. In this sample card you will find all of our fabric options for 1932-1936 Ford Tudors. They are separated into six groups:


- 1932-1936 Tudor Top Roof Samples
- 1932-1936 Tudor Carpet Samples
- 1932 Tudor Authentic Upholstery Samples
- 1933-1934 Tudor Authentic Upholstery Samples
- 1935-1936 Tudor Authentic Upholstery Samples
- 1932-1936 Tudor Non-Authentic Upholstery Samples

When ordering a Tudor Upholstery Kit use the "Order Combination". When ordering a Tudor Top Roof Kit or Carpet use the "Order Code".

When ordering, please provide the following information:

1. Year and body style.
2. Type of product you want to order.
3. Sample descriptions and "order code" or "order combination" chosen from this card.
4. Shipping name and address.
5. Payment method.

Thank you from **CARTOUCHE™** and we look forward to meeting all of your V8 Ford upholstery product needs.

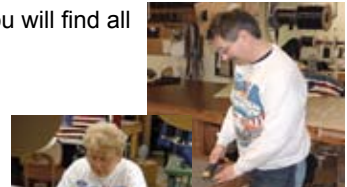

## 1932-1936 Tudor Top Roof Samples

**Order Code  
3B  
Colonial**




**Order Code  
4B  
Short Grain Cobra**




## 1932-1936 Tudor Carpet Samples

**Order Code  
807**

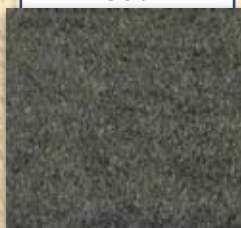


**Dark Gray  
Nylon**

**Order Code  
810**

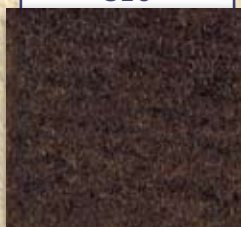

**Brown  
Nylon**

**Order Code  
868**

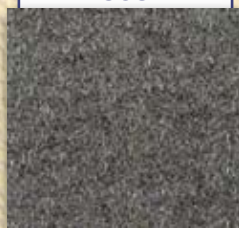


**Medium Gray  
Nylon**

**Order Code  
821**




**Taupe  
Nylon**

**Order Code  
897**

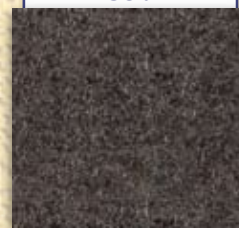

**Charcoal  
Nylon**

**Order Code  
840**

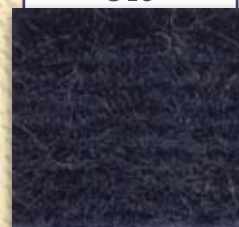


**Navy Blue  
Nylon**



## 1932 Tudor Authentic Upholstery Samples

	Order Combination UV16X1	Order Combination UV16X2	Order Combination UV16X3	Order Combination UV16X4
Seats	 11XC	 15X76	 31X1	 15X46
Panels	 10XLM	 15X76	 31X1	 2XLM
Headliner	 A810	 A810	 A810	 A810

**\*\* THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY \*\***

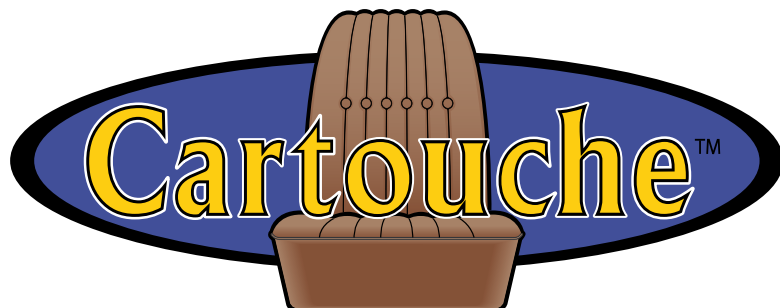

- Large selection of authentic and non-authentic fabric choices
- Satisfaction guaranteed
- Technical service available
- Friendly, professional service
- Fast shipping

Visit our website to order or find a dealer near you:  
**[www.cartoucheupholstery.com](http://www.cartoucheupholstery.com)**



## 1933-1934 Tudor Authentic Upholstery Samples

	Order Combination UV17X1	Order Combination UV17X3	Order Combination UV17X4
Seats			
	11XC	15X77	31X1
Panels			
	11XC	5XLM	31X1
Headliner			
	A810	A812	A810

## 1935-1936 Tudor Authentic Upholstery Samples

	Order Combination UV18X1	Order Combination UV18X2	Order Combination UV18X3	Order Combination UV18X4	Order Combination UV18X5
Seats					
	15X40	30X3	15X76	11XC	31X1
Panels					
	2XLM	30X3	15X76	11XC	31X1
Headliner					
	A810	A810	A810	A810	A810

**\*\* THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY \*\***



1932-1936 Tudor Non-Authentic Upholstery Samples

Seats	Order Combination UV31N1	Order Combination UA31N2	Order Combination UV31N3	Order Combination UV31N4	Order Combination UV31N5
					
	5465	2522	4444	3412	8139
Panels & Headliner					
	11212	A811	A813	A815	A812
Seats	Order Combination UV31N7	Order Combination UV31N8	Order Combination UV31N9	Order Combination UV31N10	
					
	41734	41736	41924	9323	
Panels & Headliner					
	A811	A815	A815	5729	