

# 1937 -1940 Ford Tudor Fabric Sample Card

## Ordering Guidelines

Thank you for inquiring about **CARTOUCHE™** brand premium products. In this sample card you will find all of our fabric options for 1937-1940 Ford Tudors. They are separated into five groups:

- 1937-1940 Tudor Carpet Samples
- 1937-1938 Tudor Authentic Upholstery Samples
- 1939 Tudor Authentic Upholstery Samples
- 1940 Tudor Authentic Upholstery Samples
- 1937-1940 Tudor Non-Authentic Upholstery Samples

When ordering a Tudor Upholstery Kit use the "Order Combination". When ordering a Tudor Top Roof Kit or Carpet use the "Order Code".

When ordering, please provide the following information:

1. Year and body style.
2. Type of product you want to order.
3. Sample descriptions and "order code" or "order combination" chosen from this card.
4. Shipping name and address.
5. Payment method.

Thank you from **CARTOUCHE™** and we look forward to meeting all of your V8 Ford upholstery product needs.



## 1937-1940 Tudor Carpet Samples

<div>Order Code 807</div>  <div>Dark Gray Nylon</div>	<div>Order Code 868</div>  <div>Medium Gray Nylon</div>	<div>Order Code 897</div>  <div>Charcoal Nylon</div>
<div>Order Code 810</div>  <div>Brown Nylon</div>	<div>Order Code 821</div>  <div>Taupe Nylon</div>	<div>Order Code 840</div>  <div>Navy Blue Nylon</div>

**\*\* THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY \*\***



## 1937-1938 Tudor Authentic Upholstery Samples

	Order Combination UV19X1	Order Combination UV19X2	Order Combination UV19X3	Order Combination UV19X4	Order Combination UV19X5
Seats					
	30X3	15X20	15X37	33X1S	15X38
Panels					
	30X3	2XLM	15X37	33X1S	15X38
Headliner					
	A810	A810	A810	A810	A812

## 1939 Tudor Authentic Upholstery Samples

	Order Combination UV20X1	Order Combination UV20X3	Order Combination UV20X4	Order Combination UV20X5
Seats				
	33X1S	15X37	15X36	33X1S
Panels				
	33X1S	2XLM	2XLM	SX9
Headliner				
	A810	A810	A810	A810


**\*\* THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY \*\***



## 1940 Tudor Authentic Upholstery Samples

Seats

Order  
Combination  
UV21X1

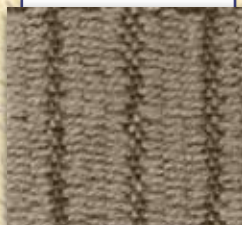


15X41

Order  
Combination  
UV21X2




33X1S

Order  
Combination  
UV21X3

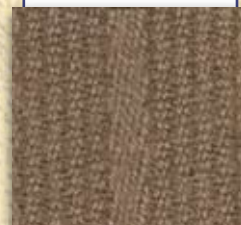


15X36


Panels

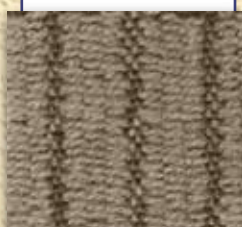

15X41

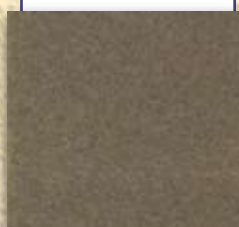


SX9

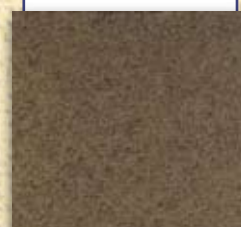


2XLM


Headliner

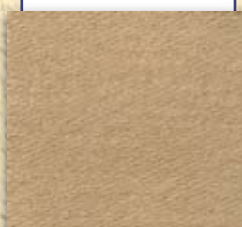

A810

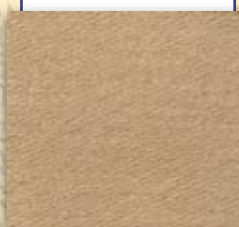


A810

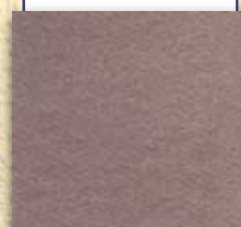

A815

**\*\* THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY \*\***

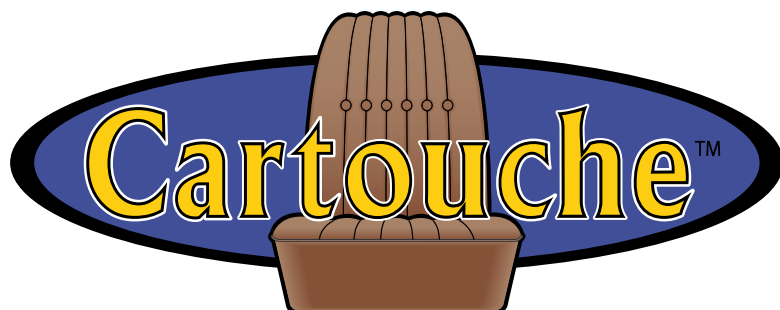

- Large selection of authentic and non-authentic fabric choices
- Satisfaction guaranteed
- Technical service available
- Friendly, professional service
- Fast shipping

Visit our website to order or find a dealer near you:


**[www.cartoucheupholstery.com](http://www.cartoucheupholstery.com)**



## 1937-1940 Tudor Non-Authentic Upholstery Samples

**Seats**

Order  
Combination  
UV31N1

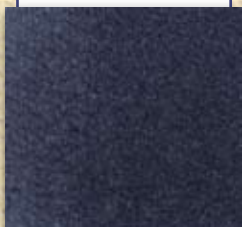


5465

Order  
Combination  
UA31N2




2522

Order  
Combination  
UV31N3

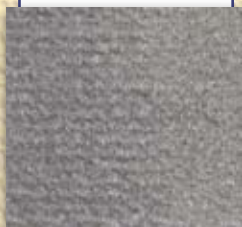


4444

Order  
Combination  
UV31N4

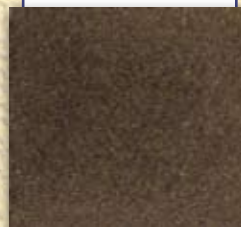

3412

Order  
Combination  
UV31N5

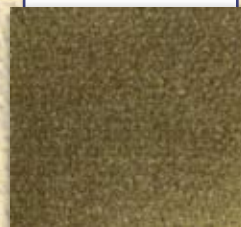


8139


**Panels &  
Headliner**



11212

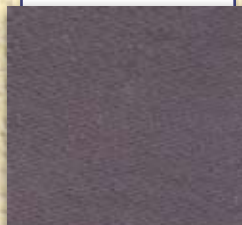


A811

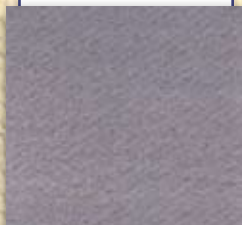

A813




A815

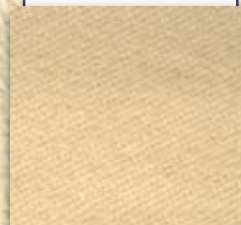

A812


**Seats**

Order  
Combination  
UV31N7

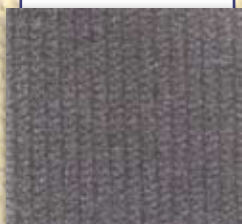


41734

Order  
Combination  
UV31N8

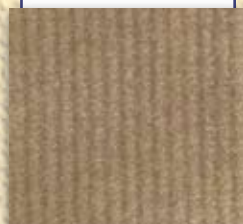


41736

Order  
Combination  
UV31N9

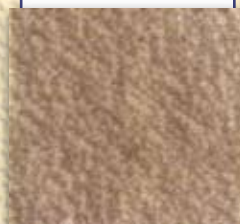


41924

Order  
Combination  
UV31N10

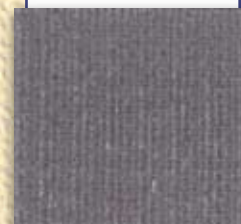

9323

**Panels &  
Headliner**

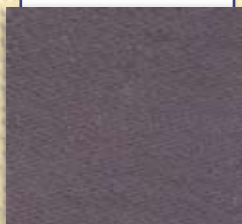


A811



A815



A815

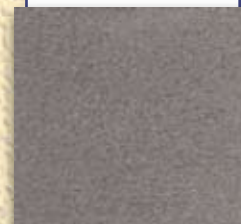

5729

**\*\* THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY \*\***