

1941-1948 Ford Tudor Fabric Sample Card

Ordering Guidelines

Thank you for inquiring about **CARTOUCHE™** brand premium products. In this sample card you will find all of our fabric options for 1941-1948 Ford Tudors. They are separated into four groups:

- 1941-1948 Tudor Carpet Samples
- 1941-1942 Tudor Authentic Upholstery Samples
- 1946-1948 Tudor Authentic Upholstery Samples
- 1941-1948 Tudor Non-Authentic Upholstery Samples

When ordering a Tudor Upholstery Kit use the "Order Combination". When ordering a Tudor Top Roof Kit or Carpet use the "Order Code".




When ordering, please provide the following information:

1. Year and body style.
2. Type of product you want to order.
3. Sample descriptions and "order code" or "order combination" chosen from this card.
4. Shipping name and address.
5. Payment method.

Thank you from **CARTOUCHE™** and we look forward to meeting all of your V8 Ford upholstery product needs.



1941-1948 Tudor Carpet Samples

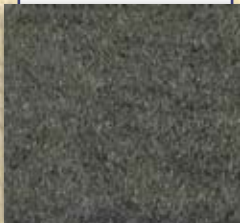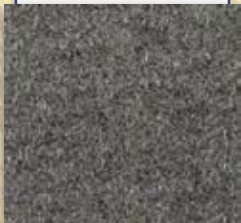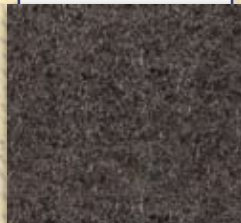Order Code 807  Dark Gray Nylon	Order Code 868  Medium Gray Nylon	Order Code 897  Charcoal Nylon
Order Code 810  Brown Nylon	Order Code 821  Taupe Nylon	Order Code 840  Navy Blue Nylon

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

1941-1942 Tudor Authentic Upholstery Samples


Seats

Order
Combination
UV22X1




15X27

Panels

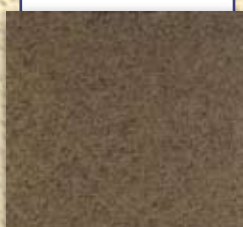

2XLM


Headliner

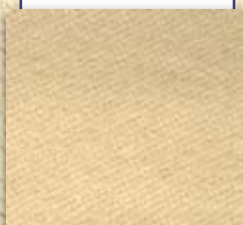

A812


Seats

Order
Combination
UV22X3

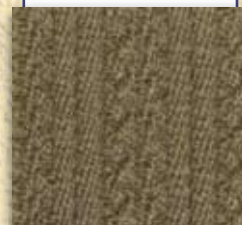


15X28

Panels

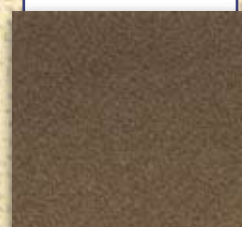


SX2

Headliner

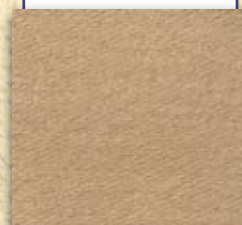

A810

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****










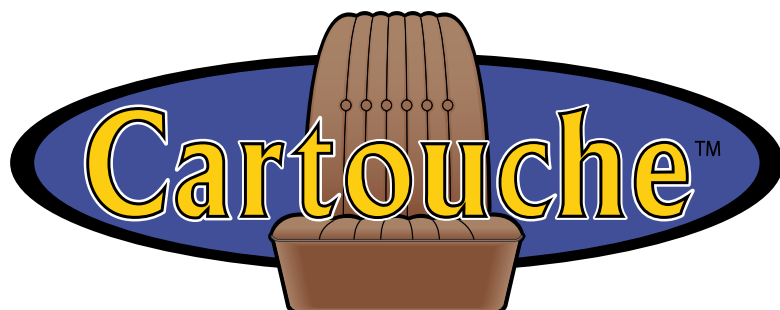


- Large selection of authentic and non-authentic fabric choices
- Satisfaction guaranteed
- Technical service available
- Friendly, professional service
- Fast shipping

Visit our website to order or find a dealer near you:

www.cartoucheupholstery.com

1946-1948 Tudor Authentic Upholstery Samples

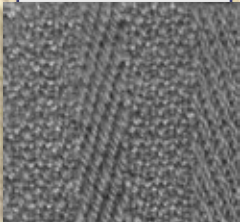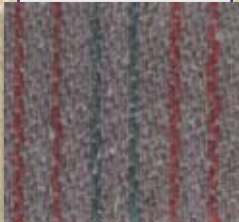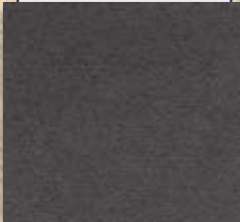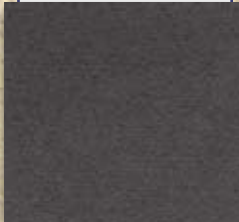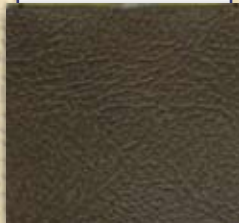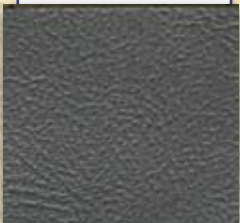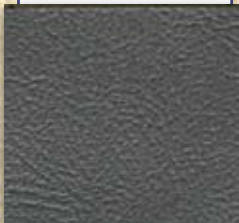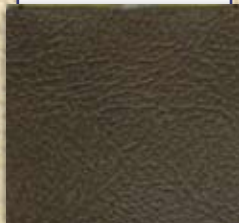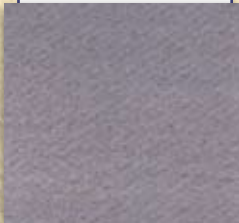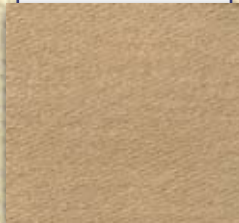
	Order Combination UV23X1	Order Combination UV23X2	Order Combination UV23X3
Seat Faces	 15X24	 15X611	 33X1S
Partial Panels & Seat Backs	 SX3	 SX3	 SX9
Partial Panels & Seat Carriage	 T18	 T18	 T12
Seat Borders	 T13	 T13	 T12
Headliner	 A813	 A813	 A810

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

1941-1948 Tudor Non-Authentic Upholstery Samples

Seats

Order
Combination
UV31N1

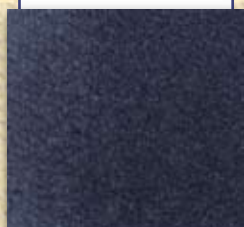


5465

Order
Combination
UA31N2




2522

Order
Combination
UV31N3

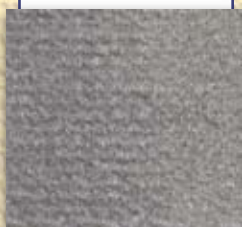


4444

Order
Combination
UV31N4

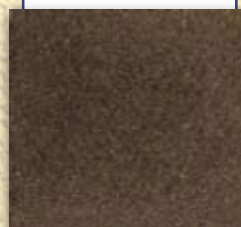

3412

Order
Combination
UV31N5

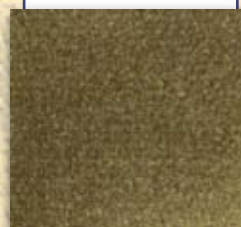


8139


Panels &
Headliner



11212

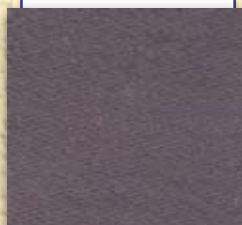


A811

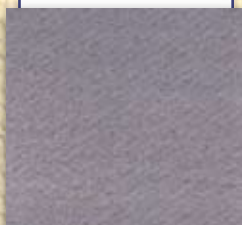

A813




A815

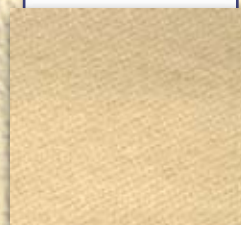

A812


Seats

Order
Combination
UV31N7

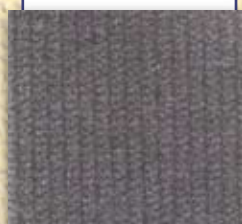


41734

Order
Combination
UV31N8

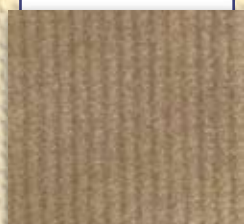


41736

Order
Combination
UV31N9

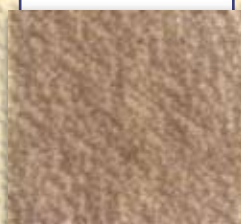


41924

Order
Combination
UV31N10

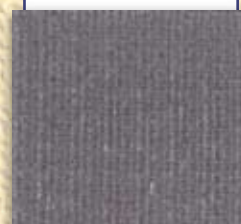


9323

Panels &
Headliner

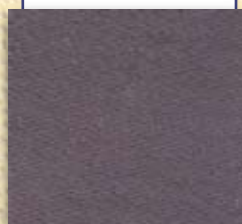


A811

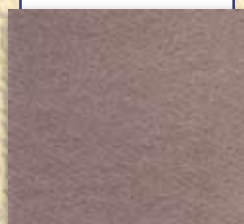

A815



A815

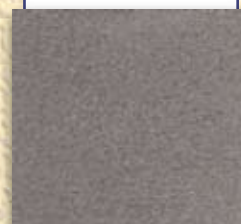

5729

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****