

1937 -1940 Ford Fordor Fabric Sample Card

Ordering Guidelines

Thank you for inquiring about **CARTOUCHE™** brand premium products. In this sample card you will find all of our fabric options for 1937-1940 Ford Fordors. They are separated into four groups:


- 1937-1940 Fordor Carpet Samples
- 1937-1938 Fordor Authentic Upholstery Samples
- 1939-1940 Fordor Authentic Upholstery Samples
- 1937-1940 Fordor Non-Authentic Upholstery Samples

When ordering a Fordor Upholstery Kit use the "Order Combination". When ordering a Fordor Top Roof Kit or Carpet use the "Order Code".

When ordering, please provide the following information:


1. Year and body style.
2. Type of product you want to order.
3. Sample descriptions and "order code" or "order combination" chosen from this card.
4. Shipping name and address.
5. Payment method.

Thank you from **CARTOUCHE™** and we look forward to meeting all of your V8 Ford upholstery product needs.

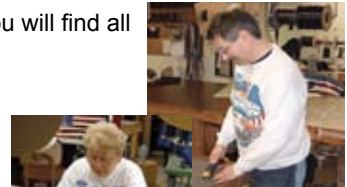


1937-1940 Fordor Carpet Samples

Order Code
807

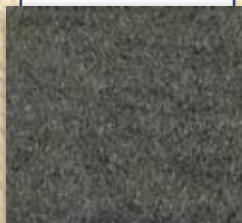


Dark Gray
Nylon

Order Code
868

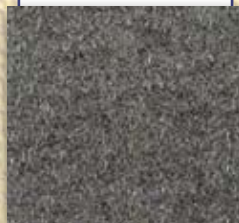

Medium Gray
Nylon

Order Code
897

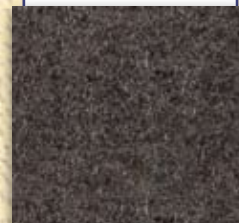

Charcoal
Nylon

Order Code
810




Brown
Nylon

Order Code
821



Taupe
Nylon

Order Code
840

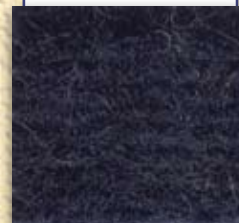


Navy Blue
Nylon

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

1937-1938 Fordor Authentic Upholstery Samples

	Order Combination UV27X1	Order Combination UV27X2	Order Combination UV27X3	Order Combination UV27X4	Order Combination UV27X5
Seats					
	15X38	15X20	15X37	33X1S	30X3
Panels					
	15X38	2XLM	15X37	33X1S	30X3
Headliner					
	A812	A810	A810	A810	A810

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

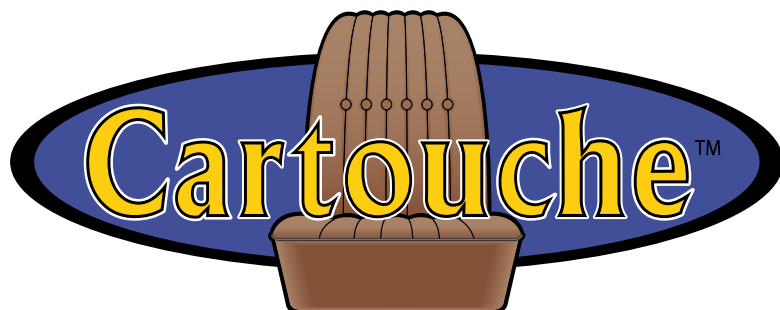


- Large selection of authentic and non-authentic fabric choices
- Satisfaction guaranteed
- Technical service available
- Friendly, professional service
- Fast shipping

Visit our website to order or find a dealer near you:
www.cartoucheupholstery.com

1939-1940 Fordor Authentic Upholstery Samples

Order
Combination
UV28X1

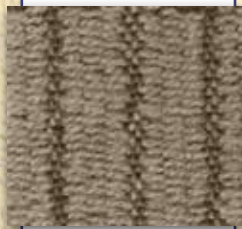

15X41

Order
Combination
UV28X2



33X1S


Order
Combination
UV28X3



15X36

Seats


Panels

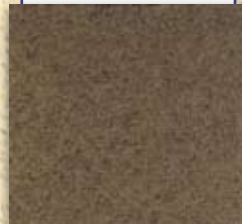

2XLM




SX9

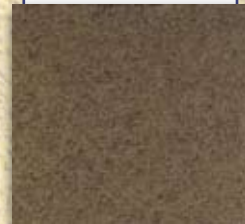


2XLM

Headliner

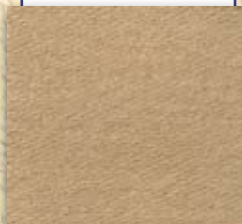

A810

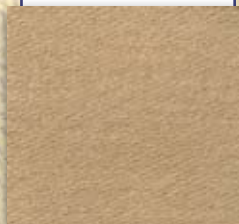

A810



A815

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

**Satisfaction
guaranteed
Fast shipping**

*Looking great
inside vintage Fords
for over 10 years!*

1937-1940 Fordor Non-Authentic Upholstery Samples

Seats

Order
Combination
UV31N1




5465

Order
Combination
UA31N2




2522

Order
Combination
UV31N3

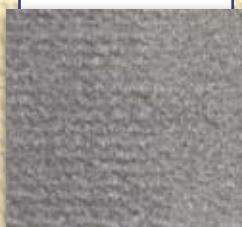


4444

Order
Combination
UV31N4

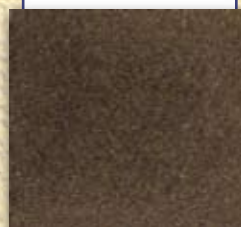

3412

Order
Combination
UV31N5

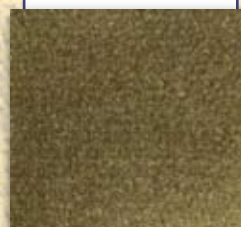


8139


**Panels &
Headliner**



11212

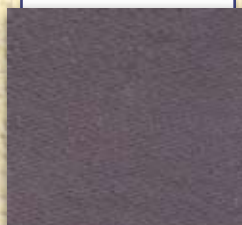


A811

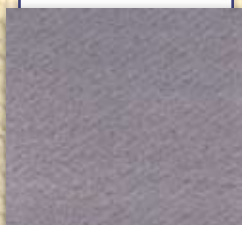

A813




A815

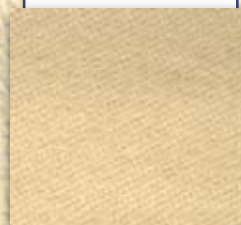

A812


Seats

Order
Combination
UV31N7

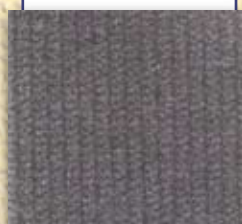


41734

Order
Combination
UV31N8

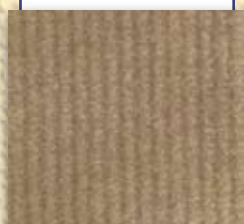


41736

Order
Combination
UV31N9

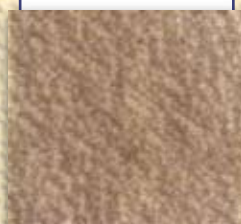


41924

Order
Combination
UV31N10

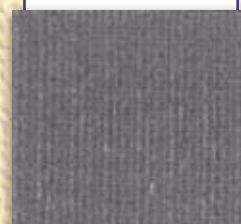


9323

**Panels &
Headliner**

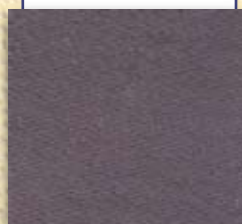


A811

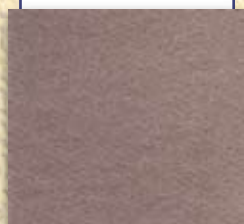

A815



A815

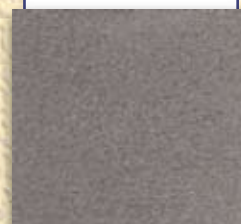

5729

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****