

1941-1948 Ford Fordor Fabric Sample Card

Ordering Guidelines

Thank you for inquiring about **CARTOUCHE™** brand premium products. In this sample card you will find all of our fabric options for 1941-1948 Ford Fordors. They are separated into four groups:

- 1941-1948 Fordor Carpet Samples
- 1941-1942 Fordor Authentic Upholstery Samples
- 1946-1948 Fordor Authentic Upholstery Samples
- 1941-1948 Fordor Non-Authentic Upholstery Samples

When ordering a Fordor Upholstery Kit use the "Order Combination". When ordering a Fordor Top Roof Kit or Carpet use the "Order Code".

When ordering, please provide the following information:


1. Year and body style.
2. Type of product you want to order.
3. Sample descriptions and "order code" or "order combination" chosen from this card.
4. Shipping name and address.
5. Payment method.

Thank you from **CARTOUCHE™** and we look forward to meeting all of your V8 Ford upholstery product needs.




1941-1948 Fordor Carpet Samples

Order Code
807

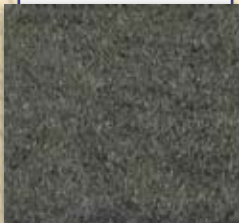


Dark Gray
Nylon

Order Code
868

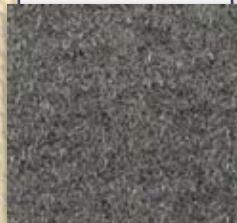

Medium Gray
Nylon

Order Code
897

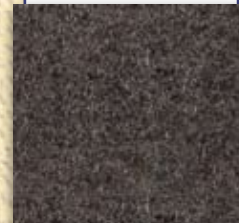

Charcoal
Nylon

Order Code
810



Brown
Nylon

Order Code
821



Taupe
Nylon

Order Code
840



Navy Blue
Nylon

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

1941-1942 Fordor Authentic Upholstery Samples


Seats

Order
Combination
UV29X1




15X27

Panels

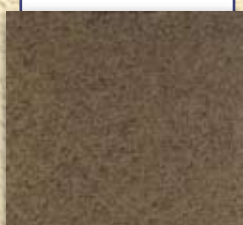

2XLM


Headliner

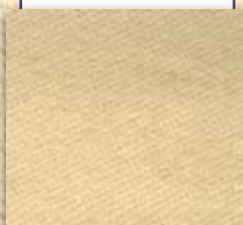

A812


Seats

Order
Combination
UV29X2

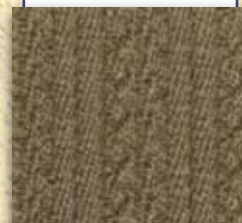


15X28

Panels

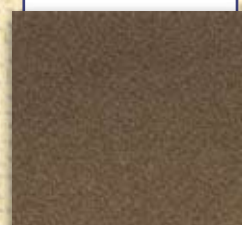


SX2

Headliner

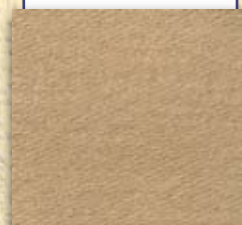

A810

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

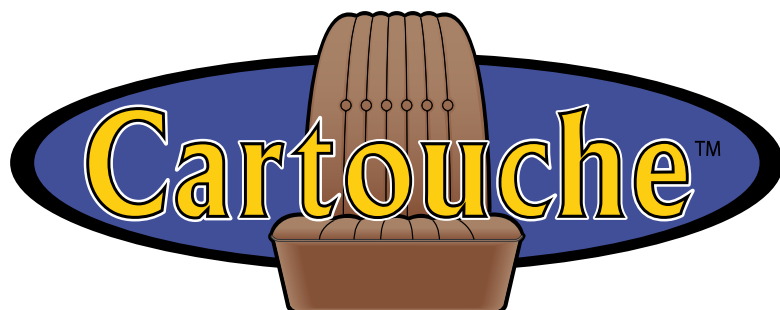

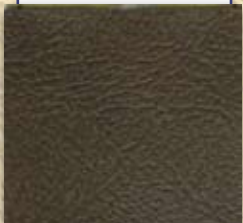
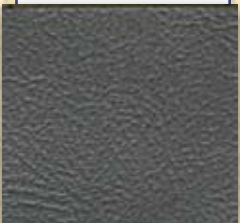



- Large selection of authentic and non-authentic fabric choices
- Satisfaction guaranteed
- Technical service available
- Friendly, professional service
- Fast shipping

Visit our website to order or find a dealer near you:

www.cartoucheupholstery.com

1946-1948 Fordor Authentic Upholstery Samples

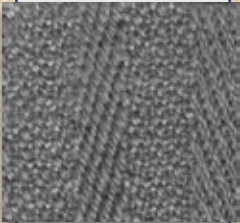	Order Combination UV30X1	Order Combination UV30X2	Order Combination UV30X3
Seat Faces	 33X1S	 15X24	 15X611
Partial Panels & Seat Backs	 SX9	 SX3	 SX3
Partial Panels & Seat Carriage	 T12	 T18	 T18
Seat Borders	 T12	 T13	 T13
Headliner	 A810	 A813	 A813

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****

1941-1948 Fordor Non-Authentic Upholstery Samples

Seats

Order
Combination
UV31N1




5465

Order
Combination
UA31N2




2522

Order
Combination
UV31N3

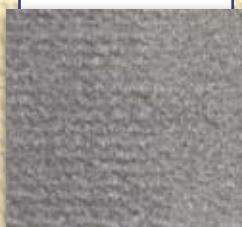


4444

Order
Combination
UV31N4

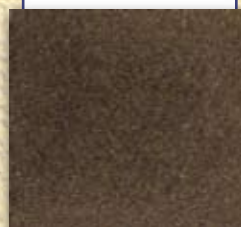

3412

Order
Combination
UV31N5

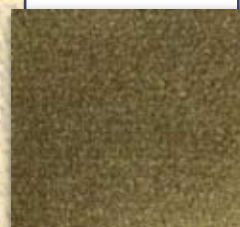


8139


**Panels &
Headliner**



11212

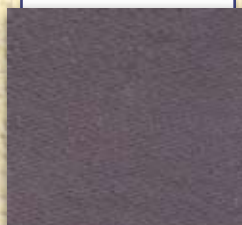


A811

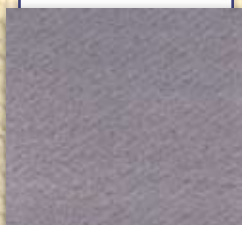

A813




A815

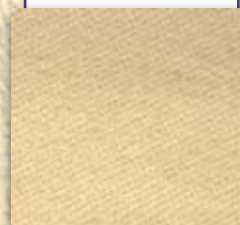

A812


Seats

Order
Combination
UV31N7

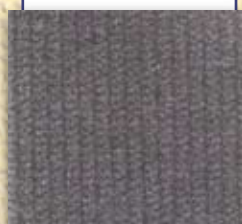


41734

Order
Combination
UV31N8

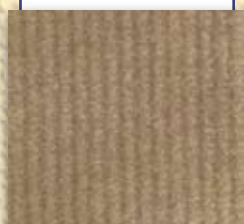


41736

Order
Combination
UV31N9

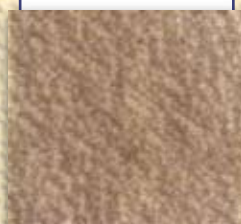


41924

Order
Combination
UV31N10

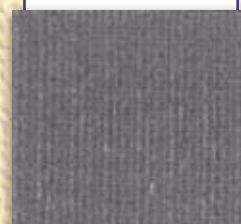


9323

**Panels &
Headliner**

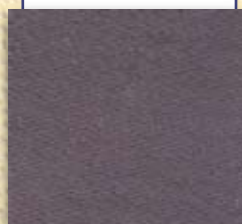


A811

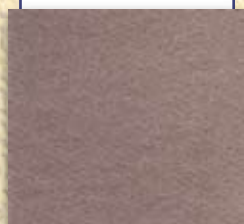

A815



A815

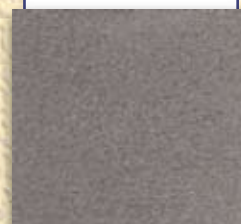

5729

**** THESE DIGITAL SAMPLES ARE BEST USED FOR REFERENCE ONLY ****